
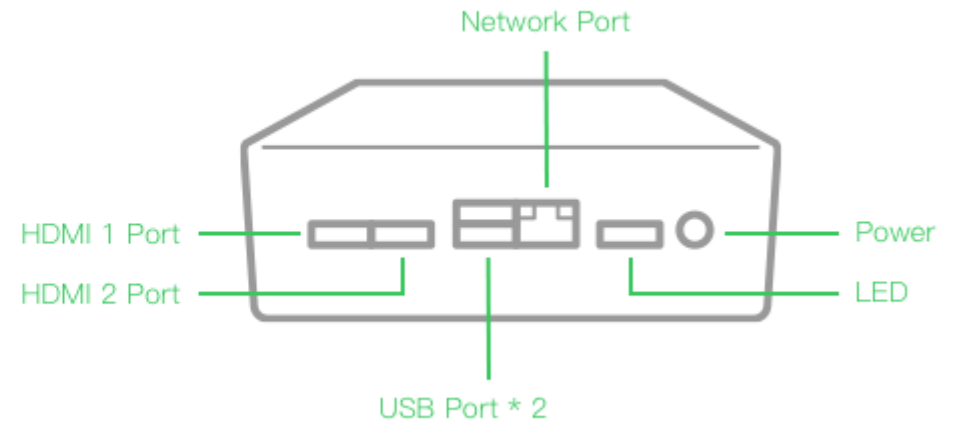


## Panda Miner Instructions

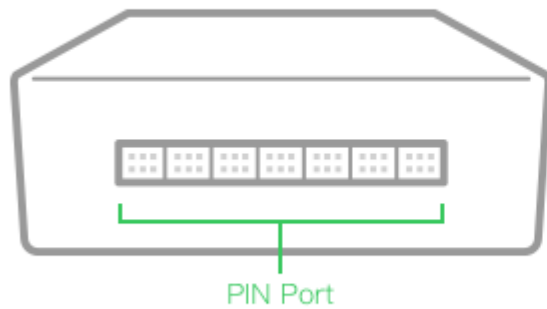

- Left Side

PIN Port: Connect power supply

- Right Side

HDMI 1 Port: HDMI of GPU

HDMI 2 Port: HDMI of motherboard

USB Port: For file transfer

Network Port: Connect to network

Indicators: Working status indicator

Switch: Turn on or off

## **Operation Guidance**

1. Connect power supply with a 6pin port
2. Connect to network
3. Connect a monitor and turn on the miner
4. Operate mining under the instruction on the desktop file

Updates of mining software may result in a change of setting methods. We will inform you of the latest updates.

## **ETH**

Open the latest eth mining software on the desktop

1. Right-click the file in the **Al.bat** file, click Edit, and you can see the following command number:

**EthDcvMiner64.exe-model-epooleth.f2pool.com8008-ewal ETH address -psw x-eworkerAM240-dgb-1**

2. Enter your own address, save the document. Double-click Run the **Al.bat** file. You can start mining.

## **ZEC**

Open the latest eth mining software on the desktop

1. Right-click the file inside the Config.txt file, click Edit, and you can see the following command, the third line:

**# -ewal ZEC address**

2. Enter your own address, save the document, and then close. Locate the file bat and double-click to run the **start.bat** file. You can start mining.